



Originalfernbedienung Ersatzfernbedienung

	TV System	 + 	Shift + TV/Radio / Program
	Power		Power
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Recall	 + 	Shift + Back / Return
	A-B	 + 	Shift + 0
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0

Originalfernbedienung Ersatzfernbedienung

	Edit		Fav / Marker / PC
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Up / CH+	 + 	Shift + Up
	Up / CH+		Up
	Play		Play / Slow
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down / CH-	 + 	Shift + Down
	Down / CH-		Down
	Home		Menu / Home
	Stop		Stop / Hold
	Favor/Vol + / Sel		Vol+
	Source		AV / Input / RDS
	← Skip		<< / Tune-



