 

 

 

 



 


 

 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Tv/Radio		TV/R
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Smart
	Favourite		Pre Ch
	Menu		Menu
	Info		Info

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	EPG		Guide
	Subtitle		Subt
	Audio		Dual
	TTX		Text
	<<		<<
	>>		>>





Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
PREV			
	>>I		>>I
NEXT			
	Play		Play
PLAY			
	Pause		Pause
PAUSE			
	Stop		Stop
STOP			
	Rec		Rec
REC			
	Repeat	+	Shift + Text
REPEAT			
	Page+	+	Shift + Ch +
PAGE+			
	Page-	+	Shift + Ch -
PAGE-			
	PVR		Media
PVR			
	Red/USB		Red
USB			
	Green/V-Format		Green
V-FORMAT			
	Yellow/Aspect		Yellow
ASPECT			
	Blue/Timer		Blue
TIMER			

Originalfernbedienung Ersatzfernbedienung

