

 

 





 

 







 

 

 



 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	FAV		Fav / Marker / PC
	Text		Text / Goto
	Hold		Shift + Stop /
	TVG		Guide / EPG / -/--
	Subtitle		Subtitle / EQ
	Size		Zoom / Size
	Aspect		Shift + Picture / Format
	Media		Smart / List
	Subpage		Eject / Surround
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	I<<		I<< / Preset-
	Sleep		Sleep / Timer
	>>I/Index		>>I / Preset+
	Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Vol+		Vol+
	Vol-		Vol-



