














Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	[+]		Shift + Picture / Format
	Sound		Sound / Title
	Pic		Picture / Format
	Guide		Guide / EPG / -/--
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0



























 

 

 



Originalfernbedienung Ersatzfernbedienung

	Recall		Fav / Marker / PC
	Sub		Subtitle / EQ
	Text		Text / Goto
	Mix		Shift + Text /
	Size		Zoom / Size
	Hold		Shift + Stop /
	TIP		D.Menu / Top
	Sub.P		Eject / Surround
	Index		Display / Media
	Info		Info / Angle
	FAV		Shift + Fav / Marker / PC
	TV / R		TV/Radio /
	Audio		Audio / Lang I/II
	Menu		Menu / Home
	Up		Up
	Input		AV / Input / RDS
	Left		Left



 

 


 










Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	Sleep		Sleep / Timer
	CH +		CH+ / Page+
	Vol -		Vol-
	Prog		Shift + TV/Radio / Program
	CH -		CH- / Page-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop/Rec		Stop / Hold
	HDMI Source		Shift + 0
	DTV Source		Shift + 1
	I<<		I<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	>>		>> / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

