 

 

 

 

 
 
 
 
 

 
 
 

 

 



 
 
 
 
 
 
 
 
 





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Auto/Eject		Smart
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Pre Ch
	Vol-		Vol -
	Vol+		Vol +

 
 




 

 

 
 
 

 

 

 

 
 
 
 

 
 


 
 
 


**Originalfernbedienung Ersatzfernbedienung**

	CH+		Ch +
	CH-		Ch -
	Aspect		Format
	D.Disp		Media
	Display		Info
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	LCD Menu		Menu
	Exit/DVD Setup		Exit
	Input		AV
	P-Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep
	FAV		Shift + Pre Ch

 

 
 
 

 

 

 

 

 




**Originalfernbedienung Ersatzfernbedienung**

	Play/Pause		Play
	Stop		Stop
	FAV-		Shift + Ch -
	FAV+		Shift + Ch +
	EPG		Guide
	I<<		I<<
	Text		Text
	<<		<<
	Hold		Options
	>>I		>>I
	Audio/Lang		Dual
	Subtitle		Subt
	Index		TV/R
	Angle/Reveal		Shift + Options
	D.Menu		D. Menu
	Nicam		Shift + Smart
	Title		List

**Originalfernbedienung Ersatzfernbedienung**

	Goto		Eject
	Red/Prog		Red
	Green/Intro		Green
	Zoom/Subpage		3D
	Yellow/Repeat		Yellow
	Blue/A-B		Blue
	>>/Aspect		>>
	I>		Pause

