








 
 

 


 


 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red/↑		Red / Netflix / Search
	Green/↓		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]		Text / Goto
	[≡x]		Exit / Cancel / Clear
	EPG		Guide / EPG / -/--
	[*]/[■]		Zoom / Size
	Screen		Picture / Format
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4

Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	Tv/DTV		TV/Radio /
	Vol-		Vol-
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR-		CH- / Page-
	PR+		CH+ / Page+
	Preset		Smart / List
	Source		AV / Input / RDS
	Info/[≡?]		Info / Angle
	Swap/Recall		Display / Media





**Originalfernbedienung    Ersatzfernbedienung**

	Return		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	M		Menu / Home

**Originalfernbedienung    Ersatzfernbedienung**