



 
 

 
 



 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Input Up		Ch +
	Input Down		Ch -
	Timer		AV
	Up		Up
	Down		Down
	Enter		Ok
	Random CD		Options
	Stop CD		Stop
	Pause CD		Pause
	Play CD		Play
	Memory CD		Rec
	Repeat CD		Text
	I<< CD		I<<
	>>I CD		>>I
	Scroll MD		Subt
	Stop MD		Blue

Originalfernbedienung Ersatzfernbedienung

	Pause MD		Yellow
	Play MD		Green
	Play Mode MD		Dual
	Repeat MD		Shift + Text
	I<< MD		<<
	>>I MD		>>
	Sleep		Sleep
	A.Presence		Info
	Clock Call		Media
	Volume Up		Vol +
	Volume Down		Vol -
	Muting		Mute
	Stop CDR		1
	Pause CDR		2
	Play CDR		3
	Play Mode CDR		7
	Repeat CDR		4





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	I<< CDR		5
	>>I CDR		6
	< Tape		Guide
	Stop Tape		0
	Tape >		Pre Ch
<< Tape button icon"/>	<< Tape		8
>> Tape button icon"/>	>> Tape		9
	Tuner Preset Up		Right
	Tuner Preset		Left

