



 
Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Power CD		Shift + Power
	Sleep		Sleep
	Dimmer		Media
	DSP		Smart
	< Preset		Left
	Preset >		Right
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0//SP B		0




 




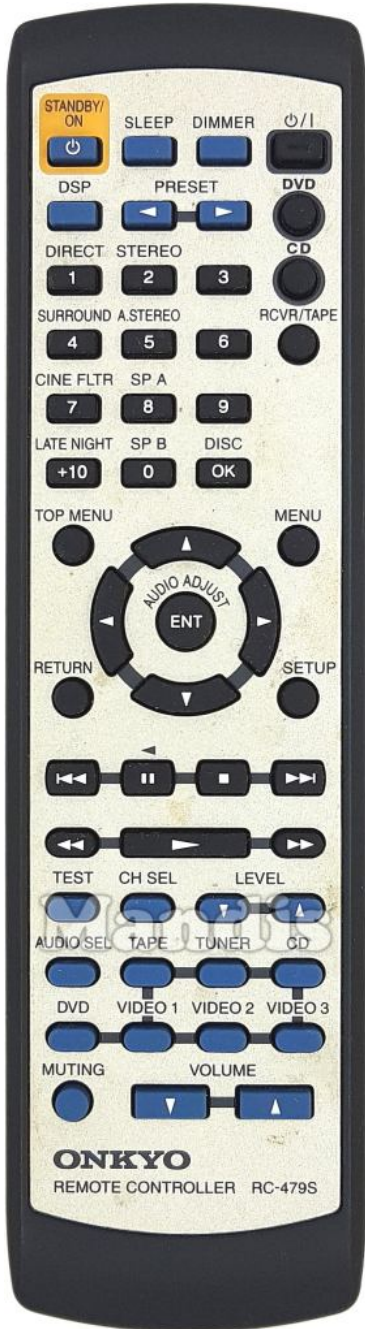




 
Originalfernbedienung Ersatzfernbedienung

	+10		Guide
	OK/Disc		Ok
	I<<		I<<
	Pause/<		Pause
	Stop		Stop
	>>I		>>I
	<<		<<
	Play		Play
	>>		>>
	Test		Text
	CH Sel		Options
	Level Down		Ch -
	Level Up		Ch +
	Audio Sel		Dual
	Tape		Subt
	Tuner		TV/R
	CD		Yellow









 


 





 



 

 

 












Originalfernbedienung Ersatzfernbedienung

	DVD		Blue
	Video 1		Red
	Video 2		Green
	Video 3		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute

Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

	Power DVD		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/SP B		0
	+10		Guide
	OK/Disc		Pre Ch
	Top Menu		Shift + Menu
	Menu		Menu
	Return		Back
	Setup		Options

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	ENT/Audio Adjust		Ok
	I<<		I<<
	Pause/<		Pause
	Stop		Stop
	>>I		>>I
	<<		<<
	Play		Play
	>>		>>
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute



