
 









 



 



 
 


 

 



 

 









 
 


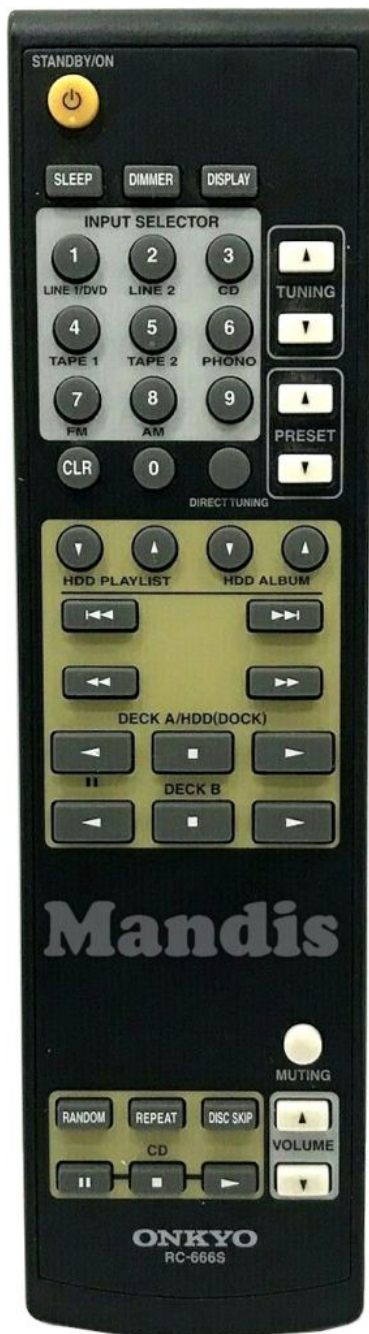 
Originalfernbedienung Ersatzfernbedienung

	STANDBY/ON		Power
	SLEEP		Sleep / Timer
	DIMMER		Shift + Mute / Dimmer
	DISPLAY		Display / Media
	1 LINE 1/DVD		1
	2 LINE 2		2
	3 CD		3
	TUNING UP		CH+ / Page+
	4 TAPE 1		4
	5 TAPE 2		5
	6 PHONO		6
	TUNING DOWN		CH- / Page-
	7 FM		7
	8 AM		8
	9		9
	PRESET UP		Shift + >> / Preset+
	CLR		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	0		0
	DIRECT TUNING		D.Menu / Top
	PRESET DOWN		Shift + I<< / Preset-
	HDD PLAY LIST		Shift + Down
	HDD PLAYLIST		Shift + Up
	HDD ALBUM		Down
	HDD ALBUM UP		Up
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	PAUSE		Pause / Step / Freeze
	PLAY < DECK A/HDD DOCK		Shift + << /
	STOP DECK A/HDD DOCK		Rec / Rec Mode
	PLAY > DECK A/HDD DOCK		Play / Slow
	PLAY < DECK B		Sound / Title
	STOP DECK B		Stop / Hold





Originalfernbedienung **Ersatzfernbedienung**

	PLAY > DECK B	 + 	Shift + >> /
	MUTING		Mute / Dimmer
	RANDOM		Blue / Prime Video / Random
	REPEAT		Green / APP / Repeat
	DISC SKIP		Back / Return
	VOL+		Vol+
	CD PAUSE	 + 	Shift + Pause / Step /
	CD STOP	 + 	Shift + Stop /
	CD PLAY	 + 	Shift + Play /
	VOL-		Vol-

Originalfernbedienung **Ersatzfernbedienung**

