












 



 

 

 

 

 
 
 


 


















 



 




 
 






 
 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Standby / On	 Power	 Play reverse / Pause	 Pause
 Sleep	 Sleep	 >>	 >>
 Dimmer	 Blue	 Stop	 Stop
 Display	 Info	 <<	 <<
 Input Sel. CD	 1	 Play	 Play
 Input Sel. Tape	 2	 Muting	 Mute
 Input Sel. Phono	 3	 Up	 Up
 Input Sel. Tuner	 4	 Right	 Right
 Input Sel. DVD	 5	 Down	 Down
 Input Sel. Video 1	 6	 Left	 Left
 Input Sel. Video 2	 7	 Enter	 Ok
 SUR Mode	 Subt	 Volume +	 Vol +
 Audio Sel	 Dual	 Volume -	 Vol -
 Tuner + / Preset	 Ch +	 Return	 Back
 Tuner - / Preset -	 Ch -	 Setup	 Options
 I<<	 I<<	 Test Tone	 Smart
 >>I	 >>I	 CH Sel	 Media



