


**Originalfernbedienung    Ersatzfernbedienung**

	Standby / On		Power
	Sleep		Sleep
	Dimmer		Blue
	Display		Info
	Input Sel. CD		1
	Input Sel. Tape		2
	Input Sel. Phono		3
	Input Sel. Tuner		4
	Input Sel. DVD		5
	Input Sel. Video 1		6
	Input Sel. Video 2		7
	SUR Mode		Subt
	Audio Sel		Dual
	Tuner + / Preset		Ch +
	Tuner - / Preset -		Ch -
	I<<		I<<
	>>I		>>I

 



**Originalfernbedienung    Ersatzfernbedienung**

	Play reverse / Pause		Pause
	>>		>>
	Stop		Stop
	<<		<<
	Play		Play
	Muting		Mute
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Volume +		Vol +
	Volume -		Vol -
	Return		Back
	Setup		Options
	Test Tone		Smart
	CH Sel		Media





## Originalfernbedienung Ersatzfernbedienung

	Level -		Shift + Down
	Level +		Shift + Up

## Originalfernbedienung Ersatzfernbedienung

 
 




 







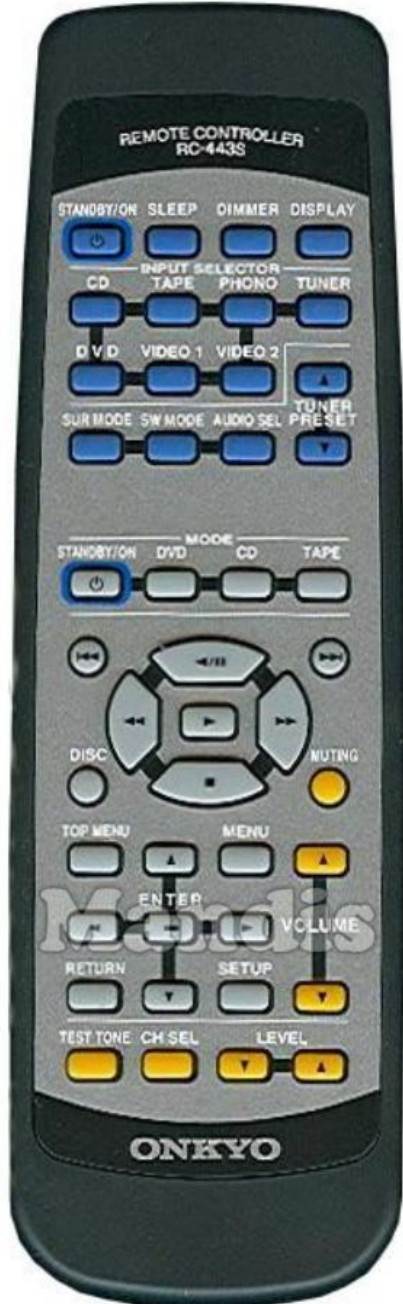 

**Originalfernbedienung Ersatzfernbedienung**

	Power DVD		Power
	I<<		I<<
	>>I		>>I
	Play Reverse / Pause		Pause
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	Disc		Smart
	Muting		Mute
	Top Menu		Shift + Menu
	Top Menu		D. Menu
	Menu		Menu
	Up		Up
	Right		Right
	Down		Down
	Left		Left

**Originalfernbedienung Ersatzfernbedienung**

	Enter		Ok
	Volume +		Vol +
	Volume -		Vol -
	Return		Back
	Setup		Options





Originalfernbedienung Ersatzfernbedienung

	Play reverse / Pause		Pause
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	Muting		Mute
	Volume +		Vol +
	Volume -		Vol -
	Left		Left
	Enter		Ok
	Right		Right

Originalfernbedienung Ersatzfernbedienung