



 
 
 
 
 


 


 





 


 



 

 








Originalfernbedienung Ersatzfernbedienung

 

 
 
 
 

 





 
 





	On		Power
	Standby		Shift + Power
	1 / Last M		1
	2 / Cond.M		2
	3 / Func.M		3
	4 / Audio		4
	5 / Angle		5
	6 / Subtitle		6
	7 / Late Night		7
	8 / T-D/ST		8
	9 / Surround		9
	0 / Random		0
	+10 / --/--		Guide
	Acoustic Control		Dual
	Search		TV/R
	Program		Shift + Sleep
	Clear		Exit

Originalfernbedienung Ersatzfernbedienung

	Timer		AV
	Top Menu		Shift + Menu
	Menu		Menu
	Return		Back
	DVD Setup		D. Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Repeat		Text
	A-B		Shift + Text
	Step/Slow -		Shift + Left
	Step/Slow +		Shift + Right
	Stop		Stop
	Play		Play
	Pause		Pause





	Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	<< / Tuning-			<<
	>> / Tuning+			>>
	I<< /			I<<
	>>I /			>>I
	< Input Selector			Ch -
	Input Selector >			Ch +
	Mode			Smart
	MD/CDR/TAPE Play Rev./Pause	 + 		Shift + Pause
	MD/CDR/TAPE	 + 		Shift + Stop
	MD/CDR/TAPE	 + 		Shift + Play
	Sleep			Sleep
	Dimmer			Media
	Display			Info
	Clock	 + 		Shift + AV
	Muting			Mute
	Volume-			Vol -
	Volume+			Vol +





Originalfernbedienung Ersatzfernbedienung

	TV Power		Power
	TV Muting		Mute
	1 / SP Setup		1
	2 / Test Tone		2
	3 / CH Sel		3
	4 / SW Mode		4
	5 / Distance		5
	6 / Up		6
	6 / Up		Up
	7 / IPM		7
	8 / T-D Setup		8
	9 / Down		9
	9 / Down		Down
	0 / Random		0
	TV Input		AV
	TV Vol+		Vol +
	TV Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	TV CH+		Ch +
	TV CH-		Ch -
	Enter		Ok
	TV Setup 1 / SP Setup		Shift + 1
	TV Setup 2 / Test Tone		Shift + 2
	TV Setup 3 / CH		Shift + 3
	TV Setup 4 / SW Mode		Shift + 4
	TV Setup 5 / Distance		Shift + 5
	TV Setup 6 / Up		Shift + 6
	TV Setup 6 / Up		Shift + Up
	TV Setup 7 / IPM		Shift + 7
	TV Setup 8 / T-D Setup		Shift + 8
	TV Setup 9 /		Shift + 9
	TV Setup 9 /		Shift + Down
	TV Setup 0 /		Shift + 0

