



Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	BD/DVD		Shift + 2
	CBL/SAT		Shift + 0
	Game		Shift + 9
	PC		Shift + Fav / Marker / PC
	AUX		Shift + 7
	TUNER		Shift + 6
	TV/CD		Shift + 3
	Phono		Shift + 4
	NET		Shift + Guide / EPG / -/-
	USB		Shift + 8
	Display		Display / Media
	Muting		Mute / Dimmer
	CH/Disc/Album		CH+ / Page+
	Vol+		Vol+
	CH/Disc/Album-		CH- / Page-
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left Playlist		Left
	Enter		OK
	Right Playlist		Right
	Q/Setup		Setup / OPT /
	Down		Down
	Return		Back / Return
	Home/Audio		Audio / Lang I/II
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Movie/Tv/Search/		Red / Netflix / Search
	Music/Repeat/B		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	Game/Random/		Yellow / YouTube / Repeat
	Stereo/Mode/D		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10/--/---10/Dimmer/D.Tun		Guide / EPG / -/--
	0/11		0
	CLR/Sleep/12		Fav / Marker / PC
	CLR/Sleep/12		Sleep / Timer
	CLR/Sleep/12		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung


















 

 














Originalfernbedienung Ersatzfernbedienung

	Power BD/DVD		Power
	Play BD/DVD		Play / Slow
	Pause BD/DVD		Pause / Step / Freeze
	Stop BD/DVD		Stop / Hold
	<< BD/DVD		<< / Tune-
	>> BD/DVD		>> / Tune+
	I<< BD/DVD		I<< / Preset-
	>>I BD/DVD		>>I / Preset+
	Audio BD/DVD		Audio / Lang I/II
	Top Menu		D.Menu / Top
	Setup BD/DVD		Setup / OPT /
	Menu BD/DVD		Menu / Home
	Up BD/DVD		Up
	Left BD/DVD		Left
	Enter BD/DVD		OK
	Right BD/DVD		Right
	CLR/12 BD/DVD		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Down BD/DVD		Down
	Return BD/DVD		Back / Return
	Vol+ Receiver		Vol+
	BD/DVD		Smart / List
	Vol- Receiver		Vol-
	CBL/SAT		Display / Media
	1 BD/DVD		1
	2 BD/DVD		2
	3 BD/DVD		3
	4 BD/DVD		4
	5 BD/DVD		5
	6 BD/DVD		6
	7 BD/DVD		7
	8 BD/DVD		8
	9 BD/DVD		9
	+10/--/--10		Guide / EPG / /--
	0/11 BD/DVD		0









 

 

 













 




 

 




Originalfernbedienung Ersatzfernbedienung

	CLR/12 BD/DVD		Fav / Marker / PC
	Search BD/DVD		Red / Netflix / Search
	Repeat BD/DVD		Green / APP / Repeat
	Stereo/Mode		Yellow / YouTube / Repeat
	Random		Blue / Prime Video / Random
	Power CBL/SAT		Shift + Power
	Play CBL/SAT		Shift + Play /
	Pause CBL/SAT		Shift + Pause / Step /
	Stop CBL/SAT		Shift + Stop /
	<< CBL/SAT		Shift + << /
	>> CBL/SAT		Shift + >> /
	Setup CBL/SAT		Shift + Setup / OPT / Tools
	Menu/Prev CH CBL/SAT		Shift + Menu /
	Up CBL/SAT		Shift + Up
	Left CBL/SAT		Shift + Left
	Enter CBL/SAT		Shift + OK
	Right CBL/SAT		Shift + Right

Originalfernbedienung Ersatzfernbedienung

	Down CBL/SAT		Shift + Down
	Return CBL/SAT		Shift + Back / Return
	CH Disc/Album+ CBL/SAT		Shift + CH+ /
	CH Disc/Album- CBL/SAT		Shift + CH- /
	1 CBL/SAT		Shift + 1
	2 CBL/SAT		Shift + 2
	3 CBL/SAT		Shift + 3
	4 CBL/SAT		Shift + 4
	5 CBL/SAT		Shift + 5
	6 CBL/SAT		Shift + 6
	7 CBL/SAT		Shift + 7
	8 CBL/SAT		Shift + 8
	9 CBL/SAT		Shift + 9
	Guide CBL/SAT		Shift + Guide / EPG / -/--
	0/11 CBL/SAT		Shift + 0
	Movie Tv/Search CBL/SAT		Shift + Red / Netflix /
	Music/Repeat CBL/SAT		Shift + Green / APP / Repeat





Originalfernbedienung **Ersatzfernbedienung**

RANDOM GAME C	Game/Random	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /
MODE STEREO D	Stereo/Mode	SHIFT + Prime Video RANDOM	Shift + Blue / Prime







 










 





 


Originalfernbedienung **Ersatzfernbedienung**




Originalfernbedienung Ersatzfernbedienung

	Power CD		Power
	Play CD		Play / Slow
	Pause CD		Pause / Step / Freeze
	Stop CD		Stop / Hold
	<< CD		<< / Tune-
	>> CD		>> / Tune+
	I<< CD		I<< / Preset-
	>>I CD		>>I / Preset+
	Audio CD		Audio / Lang I/II
	Setup CD		Setup / OPT /
	Up CD		Up
	Left CD		Left
	Enter CD		OK
	Right CD		Right
	Down CD		Down
	Return CD		Back / Return
	Vol+ Receiver		Vol+

Originalfernbedienung Ersatzfernbedienung

	TV/CD		Smart / List
	CH/Disc+ CD		CH+ / Page+
	Vol- Receiver		Vol-
	CH/Disc- CD		CH- / Page-
	1 CD		1
	2 CD		2
	3 CD		3
	4 CD		4
	5 CD		5
	6 CD		6
	7 CD		7
	8 CD		8
	9 CD		9
	+10/--/--10/D.Tun/ Dimmer CD		Guide / EPG / -/-
	0/11 CD		0
	CLR/Sleep/12		Fav / Marker / PC
	Search CD		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

	Repeat CD		Green / APP / Repeat
	Mode CD		Yellow / YouTube / Repeat
	Random CD		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

 





 

 

 

 



 

 







 



 







Originalfernbedienung Ersatzfernbedienung

	Power Receiver Zone 2		Power
	CH Disc/Album+ Zone 2		CH+ / Page+
	Vol+ Zone 2		Vol+
	CH Disc/Album- Zone 2		CH- / Page-
	Vol- Zone 2		Vol-
	Up Zone 2		Up
	Left Zone 2		Left
	Enter Zone 2		OK
	Right Zone 2		Right
	Setup Zone 2		Setup / OPT /
	Down Zone 2		Down
	Return Zone 2		Back / Return
	Audio Zone 2		Audio / Lang I/II
	I<< Zone 2		I<< / Preset-
	>>I Zone 2		>>I / Preset+
	<< Zone 2		<< / Tune-
	Play Zone 2		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	>> Zone 2		>> / Tune+
	Pause Zone 2		Pause / Step / Freeze
	Stop Zone 2		Stop / Hold
	Movie Tv Zone		Red / Netflix / Search
	Music Zone 2		Green / APP / Repeat
	Game Zone 2		Yellow / YouTube / Repeat
	Stereo Zone 2		Blue / Prime Video / Random
	1 Zone 2		1
	2 Zone 2		2
	3 Zone 2		3
	4 Zone 2		4
	5 Zone 2		5
	6 Zone 2		6
	7 Zone 2		7
	8 Zone 2		8
	9 Zone 2		9
	+10/--/--10/D.Tun/Dimmer Zone 2		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

0	0/11 Zone 2	0	0
CLR SLEEP	CLR/Sleep/12	PC FAV MARKER	Fav / Marker / PC

