



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Dimmer	+	Shift + Mute / Dimmer
	SUR Mode		Eject / Surround
	MULTI-CH Input		7
	DVD		2
	TAPE		5
	TUNER		6
	PHONO		8
	CD		3
	VIDEO-1		1
	VIDEO-2		4
	TUNER Preset-		Left
	TUNER Preset-	+	Shift + I<< / Preset-
	TUNER Preset+		Right
	TUNER Preset+	+	Shift + >>I / Preset+
	CD		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	CD		Play / Slow
	Disc CD		OK
	CD		Pause / Step / Freeze
	CD		>>I / Preset+
	CD		I<< / Preset-
	CH Select		Smart / List
	Test Tone		Text / Goto
	Level+		CH+ / Page+
	Level+		Up
	Level-		CH- / Page-
	Level-		Down
	Muting		Mute / Dimmer
	Volume+		Vol+
	Volume-		Vol-





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Dimmer	+	Shift + Mute / Dimmer
	SUR Mode		Eject / Surround
	MULTI-CH Input	7	7
	DVD	2	2
	TAPE	5	5
	TUNER	6	6
	PHONO	8	8
	CD	3	3
	VIDEO-1	1	1
	VIDEO-2	4	4
	TUNER Preset-		Left
	TUNER Preset-	+	Shift + I<< / Preset-
	TUNER Preset+		Right
	TUNER Preset+	+	Shift + >>I / Preset+
	DVD		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	DVD		Play / Slow
	◀◀ DVD		<< / Tune-
	▶▶ DVD		>> / Tune+
	◀◀◀ DVD		I<<< / Preset-
	▶▶▶ DVD		>>>I / Preset+
	CH Select		Smart / List
	Test Tone		Text / Goto
	Level+		CH+ / Page+
	Level+		Up
	Level-		CH- / Page-
	Level-		Down
	Muting		Mute / Dimmer
	Volume+		Vol+
	Volume-		Vol-





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Dimmer	+	Shift + Mute / Dimmer
	SUR Mode		Eject / Surround
	MULTI-CH Input	7	7
	DVD	2	2
	TAPE	5	5
	TUNER	6	6
	PHONO	8	8
	CD	3	3
	VIDEO-1	1	1
	VIDEO-2	4	4
	TUNER Preset-		Left
	TUNER Preset-	+	Shift + I<< / Preset-
	TUNER Preset+		Right
	TUNER Preset+	+	Shift + >>I / Preset+
	◀ Tape		I<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	▶ Tape		>>I / Preset+
	▶ Tape		Play / Slow
	●/ Tape		Rec / Rec Mode
	■ Stop		Stop / Hold
	◀◀ Tape		<< / Tune-
	▶▶ Tape		>> / Tune+
	CH Select		Smart / List
	Test Tone		Text / Goto
	Level+		CH+ / Page+
	Level+		Up
	Level-		CH- / Page-
	Level-		Down
	Muting		Mute / Dimmer
	Volume+		Vol+
	Volume-		Vol-

