

 























 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Dimmer		Shift + Mute / Dimmer
	Open / Close		Eject / Surround
	CD		3
	USB		8
	Bluetooth		9
	Tuner		6
	Line		2
	Display		Display / Media
	Menu		Menu / Home
	Timer		Shift + Sleep / Timer
	Muting		Mute / Dimmer
	Up		Up
	Left		Left
	Enter		OK
	Right		Right


Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Folder		Smart / List
	Down		Down
	Mode		Info / Angle
	Vol-		Vol-
	I<<		I<< / Preset-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	<< / Tuning <		<< / Tune-
	Stop		Stop / Hold
	>> / Tuning >		>> / Tune+
	Clear		Exit / Cancel / Clear
	Clock Call		Setup / OPT /
	Tone		Audio / Lang I/II
	S.Bass		Sound / Title
	Repeat		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
SHUFFLE 	Shuffle

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

