 

 


 

 
 





 

 
 

 



 
 




 
 

 

 

 

 

 
 
 
 


 



 
 


 

 

 

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red		Red
	Green		Green
	Blue		Blue
	Yellow		Yellow
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	P.Mode		Format
	S.Mode		Shift + Dual
	Display		Info
	Sleep		Sleep
	Source		AV
	Audio/Nicam		Dual
	Tv Menu		Menu
	Exit		Exit
	Guide		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -



