



Originalfernbedienung Ersatzfernbedienung




 

 






	LIGHT On/Off		Power
	Fan OFF		0
	1H		Red / Netflix / Search
	2H		Green / APP / Repeat
	4H		Yellow / YouTube / Repeat
	Fan LOW		1
	Fan MED		2
	Fan HIGH		3

Originalfernbedienung Ersatzfernbedienung














Originalfernbedienung Ersatzfernbedienung

	Light On/Off		Power
	Fan Off		0
	1H		Red / Netflix / Search
	2H		Green / APP / Repeat
	4H		Yellow / YouTube / Repeat
	Fan LOW		1
	Fan MED		2
	Fan HIGH		3

Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung














 

 
 LIGHT ON/OFF	Light On/Off		Power
 FAN OFF	Fan Off		0
 1H	Timer 1H		Red / Netflix / Search
 2H	Timer 2H		Green / APP / Repeat
 4H	Timer 4H		Yellow / YouTube / Repeat
 LOW	Fan Low		1
 MED	Fan Med		2
 HIGH	Fan High		3

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Light On/Off		Power
	Fan Off		0
	Timer 1H		1
	Timer 2H		2
	Timer 4H		3
	Fan LOW		Yellow / YouTube / Repeat
	Fan MED		Green / APP / Repeat
	Fan HI		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

