







 

 

 

 

 

 

 





 
 










Originalfernbedienung Ersatzfernbedienung

|   |              |   |                   |
|---|--------------|---|-------------------|
|    | Power        |    | Power             |
|    | i            |    | Info / Angle      |
|    | Analog Menu  |    | Menu / Home       |
|    | Digital Menu |    | D.Menu / Top      |
|    | 1            |    | 1                 |
|    | 2            |    | 2                 |
|    | 3            |    | 3                 |
|    | Input Select |    | AV / Input / RDS  |
|    | 4            |    | 4                 |
|    | 5            |    | 5                 |
|   | 6            |   | 6                 |
|  | TV/DVB-T     |  | Display / Media   |
|  | 7            |  | 7                 |
|  | 8            |  | 8                 |
|  | 9            |  | 9                 |
|  | Guide (EPG)  |  | Guide / EPG / -/- |
|  | Timer        |  | Sleep / Timer     |

Originalfernbedienung Ersatzfernbedienung

|   |               |   |                       |
|---|---------------|---|-----------------------|
|    | 0             |    | 0                     |
|    | Mute          |    | Mute / Dimmer         |
|    | Exit          |    | Exit / Cancel / Clear |
|    | Vol+          |    | Vol+                  |
|    | Up            |    | Up                    |
|    | P+            |    | CH+ / Page+           |
|    | Left          |    | Left                  |
|    | Enter/CH List |    | OK                    |
|    | Enter/CH List |    | Smart / List          |
|    | Right         |    | Right                 |
|   | Vol-          |   | Vol-                  |
|  | Down          |  | Down                  |
|  | P-            |  | CH- / Page-           |
|  | TV/Radio      |  | TV/Radio /            |
|  | [≡]           |  | Text / Goto           |
|  | [≡o] [≡o]/P↔P |  | Back / Return         |
|  | Picture Size  |  | Picture / Format      |



