



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PP		Pre Ch
	Info		Info
	Up / P +		Up
	Up / P +		Ch +
	Down / P -		Down
	Down / P -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	Menu		Menu
	Menu		Ok
	Text		Text
	Text		Exit
	Hold		Stop
	? / >>		Dual
	-		I<<
	+		>>I
	? / >>		>>
	Size		Format
	> / <>		Play

