




 
























 













 

 

 

 


 

 
 
 


 







 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV/Source		AV / Input / RDS
	0		0
	Exit		Exit / Cancel / Clear
	-/--		Shift + Guide / EPG / -/--
	CH+		CH+ / Page+
	[i]/Info		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	CH-		CH- / Page-
	I-II		Audio / Lang I/II
	Vol-		Vol-
	Up		Up
	Left		Left
	OK/Select		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	TV/DTV		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]/Text		Text / Goto
	[≡o]		Sleep / Timer





**Originalfernbedienung   Ersatzfernbedienung**

**Power** **DIMMER MUTE** **SHIFT**

**TV** **DVD** **SAT** **AUX**

**SLOW** **STEP - FREEZE** **HOLD** **REC MODE**

**Play** **Pause** **Stop** **Red Stop**

**TUNE-** **TUNE+** **PRESET-** **PRESET+**

**First** **Previous** **Next** **Last**

**TITLE** **LANG UI** **EQ** **SURROUND**

**SOUND** **AUDIO** **SUBTITLE** **Up Arrow**

**FORMAT** **SIZE** **TIMER** **PROGRAM**

**PICTURE** **ZOOM** **SLEEP** **TV/ RADIO**

**TOP MENU** **OPT-TOOLS** **GOTO** **RDS**

**D.MENU** **SETUP** **TEXT** **AV INPUT**

**HOME** **ANGLE**

**MENU** **INFO**

**OK** (Center of directional pad)

**Clear** **EXIT** **CANCEL** **LIST** **SMART** **MEDIA** **DISPLAY** **RETURN** **BACK**

**+ VOL** **+ CH PAGE**

**-** **-**

**TV** **DVD** **CD - STB**

**1** **2** **3**

**VIDEO** **TAPE** **TUNER**

**4** **5** **6**

**AUX - HDD** **USB** **BLUETOOTH**

**7** **8** **9**

**Left Arrow** **HDMI - SAT** **PC**

**GUIDE** **0** **FAV MARKER**

**EPG**

**NETFLIX** **APP** **YouTube** **Prime Video**

**SEARCH** **REPEAT** **REPEAT A-B** **RANDOM**

**Mandis shop**

**www.mandis.tv**