


 

 
 
 


 

 


 

 


 


 







Originalfernbedienung Ersatzfernbedienung



























| | | | |
|---|--------------|---|-----------------------|
|  | Power |  | Power |
|  | Video |  | Shift + 4 |
|  | Mute |  | Mute / Dimmer |
|  | Open / Close |  | Eject / Surround |
|  | USB |  | Shift + 8 |
|  | Prog |  | TV/Radio / |
|  | Mark |  | Fav / Marker / PC |
|  | Clear |  | Exit / Cancel / Clear |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------------------------|
|  | 0 |  | 0 |
|  | 10+ |  | Guide / EPG / -/- |
|  | Goto |  | Text / Goto |
|  | << |  | << / Tune- |
|  | Vol - |  | Vol- |
|  | Vol + |  | Vol+ |
|  | I<< |  | I<< / Preset- |
|  | Play / Pause |  | Play / Slow |
|  | Stop |  | Stop / Hold |
|  | >> |  | >> / Tune+ |
|  | Repeat |  | Green / APP / Repeat |
|  | A-B |  | Yellow / YouTube / Repeat |
|  | >>I |  | >>I / Preset+ |
|  | Menu / Ripping |  | Menu / Home |
|  | Up |  | Up |
|  | Setup |  | Setup / OPT / |
|  | Left |  | Left |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|---|---------------------|---|-----------------------|
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Title |  | Sound / Title |
|  | Down |  | Down |
|  | OSD |  | Display / Media |
|  | Zoom |  | Zoom / Size |
|  | Angle |  | Info / Angle |
|  | Audio |  | Audio / Lang I/II |
|  | Sub-T |  | Subtitle / EQ |
|  | Step |  | Pause / Step / Freeze |
|  | Slow |  | Shift + Play / |
|  | Return |  | Back / Return |
|  | Default |  | D.Menu / Top |
| | | | |
| | | | |
| | | | |
| | | | |

