



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Open/Close		Eject / Surround
	USB		Shift + 8
	USB		CH+ / Page+
	Prog		TV/Radio /
	Mark		Fav / Marker / PC
	Clear		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	10+		Guide / EPG / -/-
	Goto		Text / Goto
	<<		<< / Tune-
	Vol-		Vol-
	Vol+		Vol+
	I<<		I<< / Preset-
	>>		>> / Tune+
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Menu		Menu / Home
	Up		Up
	Setup		Setup / OPT /
	Left		Left
	Enter		OK



