



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Liste		Smart / List
	EPG		Guide / EPG / -/--
	PPV		D.Menu / Top
	Dienste		Display / Media
	Up		Up
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Right		Right
	Down		Down
	P+		CH+ / Page+
	Zurück		Back / Return
	Vol+		Vol+
	P-		CH- / Page-
	Esc / TV		Exit / Cancel / Clear
	Vol-		Vol-
	Text		Text / Goto
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TV / Radio		TV/Radio /
	Opt		Setup / OPT /





Originalfernbedienung Ersatzfernbedienung

	i		Info / Angle
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

