
 
 







 


 

 
 
 







 

 


 







Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off	 Power	Exit	 Exit
Mute	 Mute	Menu Down	 Down
Epg	 +  Shift + Guide	Volume+	 Vol +
Info	 Info	CH/Page+	 Ch +
App	 Media	Audio	 Dual
Subt.List	 Subt	Volume-	 Vol -
TV	 TV/R	CH/Page-	 Ch -
Video	 D. Menu	1. ?	 1
Text	 Text	2abc	 2
Zoom	 Eject	3def	 3
TV/SAT	 AV	4ghi	 4
Menu	 Menu	5jkl	 5
Menu Up	 Up	6mno	 6
Display	 +  Shift + Info	7pqrm	 7
Menu Left	 Left	8tuv	 8
OK Enter	 Ok	9wxyz	 9
Menu Right	 Right	Guide Pilote	 Guide



Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
-----------------------	--	---------------------	--	-----------------------	--	---------------------	--

0/10		0			
FAV Pref.		Pre Ch			
Red		Red			
Green		Green			
Yellow		Yellow			
Blue		Blue			
SAT Sky		Smart			
		Shift + Ch +			
		Shift + Ch -			

