





















 





Originalfernbedienung Ersatzfernbedienung

| | | |
|------------|---|-----------------------------|
| Audio Off |  | Mute / Dimmer |
| Game |  | Blue / Prime Video / Random |
| Pbc |  | AV / Input / RDS |
| Digest |  | Text / Goto |
| C/CH |  | Sleep / Timer |
| Auto/Track |  | Picture / Format |
| DVD/TV |  | Smart / List |
| 3D |  +  | Shift + 3 |
| Menu Down |  | Down |
| Slow Down |  | CH- / Page- |
| Slow Up |  | CH+ / Page+ |
| OK Enter |  | OK |
| Menu Up |  | Up |
| Progr. |  | TV/Radio / |
| Menu Right |  | Right |
| 2 |  | 2 |
| Menu Left |  | Left |

Originalfernbedienung Ersatzfernbedienung

| | | |
|--------------|---|---------------------------|
| Rep/A-B |  | Yellow / YouTube / Repeat |
| Rewind |  | << / Tune- |
| Repeat/1/All |  | Green / APP / Repeat |
| Prev. |  | I<< / Preset- |
| F.Forward |  | >> / Tune+ |
| 3 |  | 3 |
| 4 |  | 4 |
| 5 |  | 5 |
| 6 |  | 6 |
| 7 |  | 7 |
| 8 |  | 8 |
| 9 |  | 9 |
| +10 |  | Guide / EPG / -/-- |
| 0 |  | 0 |
| 1 |  | 1 |
| Angle |  | Info / Angle |
| Play |  | Play / Slow |



| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---|-----------------------|---------------------|
| Record |  Rec / Rec Mode | | |
| Audio |  Audio / Lang I/II | | |
| Setup |  Setup / OPT / | | |
| Mark |  Fav / Marker / PC | | |
| Open/Close |  Eject / Surround | | |
| Menu |  Menu / Home | | |
| Stop |  Stop / Hold | | |
| Pause |  Pause / Step / Freeze | | |
| Subt. |  Subtitle / EQ | | |
| Title |  Sound / Title | | |
| Zoom |  Zoom / Size | | |
| On/Off |  Power | | |
| Display |  Display / Media | | |
| Return |  Back / Return | | |
| Next |  >>I / Preset+ | | |
| Top Menu |  D.Menu / Top | | |
| | | | |

