



 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	Display		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Teletext		Text / Goto
	0		0
	Subtitle		Subtitle / EQ
	Vol+		Vol+
	CH+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-
	Menu		Menu / Home
	Back		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Guide		Guide / EPG / -/-
	FAV		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Index / I<<		I<< / Preset-



