





 

 











 




 


 






 
















 







 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu / Home
	3D		Shift + 3
	TV Input		Display / Media
	AV Input		AV / Input / RDS
	i		Info / Angle
	Exit		Exit / Cancel / Clear
	Viera Tools		Smart / List
	Internet		D.Menu / Top
	Up		Up
	Guide		Guide / EPG / -/--
	Left		Left
	OK		OK
	Right		Right
	Option		Setup / OPT /
	Down		Down
	Back/Return		Back / Return

Originalfernbedienung Ersatzfernbedienung

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Text		Text / Goto
	STTL		Subtitle / EQ
	[+]/Aspect		Picture / Format
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	Surround		Eject / Surround
	0		0
	Last View		Fav / Marker / PC
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	l<<		l<< / Preset-
	Pause		Pause / Step / Freeze
	>>l		>>l / Preset+
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

