 
 
 
 
 
 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	Text		Text
	[+]/Aspect		Format
	[≡◆]/STTL		Subt
	Input TV		TV/R
	Input AV		AV
	i		Info
	X/Exit		Exit
	Back/Return		Back
	Option		Options
	Home		Smart
	APPS		Media
	Guide		Guide
	OK		Ok
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	7		7
	8		8
	9		9
	0		0
	Off Timer		3D
	Last View		Pre Ch
	?/Help		D. Menu
	Play		Play
	>>		>>
	<<		<<
	Pause		Pause
	>>I		>>I
	I<<		I<<
	Stop		Stop
	Rec		Rec

