



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	Guide		Guide
	Input Tv		TV/R
	Input AV		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Exit		Exit
	i		Info
	Option		Options
	Return/Back		Back
	Netflix		Media
	Home		Smart
	APPS		Shift + Media
	[+]/Aspect		3D

Originalfernbedienung Ersatzfernbedienung

	[≡/STTL]		Subt
	[≡]/Text		Text
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	?/Help		Dual
	Recall		Pre Ch
	1		1
	2		2
	3		3





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
4 ghi	4	4	4				
5 jkl	5	5	5				
6 mno	6	6	6				
7 pqrs	7	7	7				
8 tuv	8	8	8				
9 wxyz	9	9	9				
0	0	0	0				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Rec		Rec				
	>>		>>				
	<<		<<				
	>>		>>				
	<<		<<				

