



 


 
 

 
 


 

 


 

 
 
 
 
 









 
 

 

 
 
 






 
 

 






 

 

 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Select Drive		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Del		List
	Input Select		AV
	CH+		Ch +
	CH-		Ch -
	Cast/Viera		Smart

Originalfernbedienung Ersatzfernbedienung

	Prog/Check		Sleep
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause/PAUSE Live		Pause
	Play/x1.3		Play
	i/Status		Info
	Exit		Exit
	Pop-Up Menu/Direct		D. Menu
	Guide		Guide
	Function Menu		Menu
	Up		Up
	Down		Down
	Right/II>		Right
	<II/Left		Left





Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Option		Options
	Return		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	Rec Mode		Shift + Rec
	Ext Link		Media
	Direct Tv Rec		TV/R
	[≡]/Text		Text
	[≡♦]/STTL		Subt
	Audio		Dual
	Display		Shift + Info
	Chapter		Format
	Time Slip		Shift + Sleep

Originalfernbedienung Ersatzfernbedienung

	Manual Skip -10s		Shift + Left
	Manual Skip +60s		Shift + Right
	Power Tv		Shift + Power
	AV Tv		Shift + AV
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	CH+ Tv		Shift + Ch +
	CH- Tv		Shift + Ch -

