


 


 
 



 


 




 

 
 
 

 

 










 




 
 
 



 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Select Drive		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Last View		Pre Ch
	Radio/Tv		TV/R
	CH/Page+		Ch +
	CH/Page-		Ch -
	Internet		Smart

Originalfernbedienung Ersatzfernbedienung

	Netflix		Media
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause/PAUSE Live		Pause
	Play		Play
	Rec		Rec
	i/Status		Info
	X/Exit		Exit
	Video Menu		D. Menu
	Guide		Guide
	Function Menu		Menu
	Option		Options
	Return		Back
	Up		Up



