




 





 

 

 
 

 
 
 


 
 
 



 
 
 
 
 
 

 

 






 
 
 
 

 

 
 

 
 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mirroring		Guide
	Setting		Shift + Options
	Netflix		Media
	Home		Smart
	Internet		Shift + Smart

Originalfernbedienung Ersatzfernbedienung

	Pop-Up Menu		D. Menu
	Top Menu		Menu
	Option		Options
	Return		Back
	Up		Up
	Down		Down
	Right/ >		Right
	< /Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Play		Play
	>>		>>
	<<		<<





Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	>>I		>>I
	Stop		Stop
	Manual Skip +60s	+	Shift + Right
	Manual Skip -10s	+	Shift + Left
	Status		TV/R
	Playback Info		Info
	Subtitle		Subt
	Audio		Dual
	Picture Setting		Format
	HDR Setting		3D
	Sound Effect	+	Shift + Dual
	High Clarity		Text
	DIM		List
	Power Tv	+	Shift + Power
	AV Input Tv		AV
	Vol+ Tv		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol- Tv		Vol -
	CH+ Tv		Ch +
	CH- Tv		Ch -

