






 
 

 


 



 


 








 
 

 


 
 
 
 

 



 

 
 
 
 
 
 
 
 
 
 




| Originalfernbedienung | Ersatzfernbedienung |
|--|---|
|  Power |  Power |
|  Stop |  Stop |
|  Pause |  Pause |
|  Play |  Play |
|  I<< Track/Search |  I<< |
|  Track/Search >>I |  >>I |
|  Menu |  Menu |
|  Return |  Back |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  1/Subtitle |  1 |
|  2/Audio |  2 |
|  3/Angle |  3 |
|  4/Random |  4 |

| Originalfernbedienung | Ersatzfernbedienung |
|---|---|
|  5/Scan |  5 |
|  6/Repeat |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Aspect |  Format |
|  Game |  Smart |
|  DVD Menu |  D. Menu |
|  OSD/Track |  Text |
|  Title/Title Chapter |  Options |
| | |
| | |
| | |
| | |
| | |

