



 

 

 
 



 

 

 

 



 

 
 
 
 
 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Timer/Play		Shift + AV
	Clock/Timer		AV
	Dimmer		Media
	Auto Off		Exit
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Del		Back
	Program		Shift + Sleep
	Repeat		Text
	Play Mode		Shift + Play
	FM/AM		TV/R
	CD Play/Pause		Play
	AUX		Red
	I<</<<		<<
	iPod Play/Pause		Pause
	>>/>>I		>>
	Stop		Stop
	Re-Master		Dual
	D.Bass		Green
	Display		Info





Originalfernbedienung Ersatzfernbedienung

	Surround		3D
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Preset EQ		Smart
	iPod Menu		Menu
	Bass/Treble		Subt
	Auto Preset		Options
	Tune Mode		Format
	FM Mode		Pre Ch
	Input Level		Blue

Originalfernbedienung Ersatzfernbedienung

