

 
 
 

 


 

 
 


 
 
 
 
 



 
 







**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	SD Card		List
	Tv Input		TV/R
	AV Input		AV
	Menu		Menu
	[+]/Aspect		3D
	Internet		Smart
	Direct Tv Rec		Shift + TV/R
	i		Info
	Exit		Exit
	Viera Link		D. Menu
	Viera Tools		Media
	Option		Options
	Guide		Guide
	Return/Back		Back
	Up		Up
	Down		Down

**Originalfernbedienung Ersatzfernbedienung**

	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]/Text		Text
	[≡◆]/STTL		Subt
	[≡i]/Index		Dual
	[≡+]/Hold		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





**Originalfernbedienung    Ersatzfernbedienung**

	7		7
	8		8
	9		9
	0		0
	Last View		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Power Down Tv		Shift + Power
	Stop Tv		Stop
	Play Tv		Play
	Pause/Step Tv		Pause
	>>/>>I Tv		>>I
	<</I<< TV		I<<
	Rec TV		Rec

**Originalfernbedienung    Ersatzfernbedienung**

	Programme Up		Shift + Ch +
	Programme Down		Shift + Ch -
	Power DVD/VCR		Shift + Ok
	Rec DVD/VCR		Shift + Rec
	<</I<<		Shift + I<<
	>/>>I DVD/VCR		Shift + >>I
	Play DVD/VCR		Shift + Play
	Pause/Step		Shift + Pause
	Stop DVD/VCR		Shift + Stop
	Programme Up DVD/VCR		Shift + Up
	Programme Down DVD/VCR		Shift + Down

