





































































Originalfernbedienung Ersatzfernbedienung

	OSD		Display / Media
	Date/Time		Sleep / Timer
	Photo Shot		Fav / Marker / PC
	Start/Stop		Power
	Counter		Guide / EPG / -/--
	Reset		Exit / Cancel / Clear
	Title		Sound / Title
	Zoom T		CH+ / Page+
	Vol+		Vol+
	Multi/P-IN-P		Picture / Format
	Rec		Rec / Rec Mode
	A.DUB		D.Menu / Top
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Zoom W		CH- / Page-
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	<I Still ADV		Shift + Left
	Pause		Pause / Step / Freeze
	Still ADV I>		Shift + Right
	I<< Index		I<< / Preset-
	Stop		Stop / Hold
	Index >>I		>>I / Preset+
	Select		OK
	Var. Search		Red / Netflix / Search
	Up		Up
	P.B. Zoom		Zoom / Size
	Store		Info / Angle
	Left		Left
	Menu		Menu / Home
	Right/Set		Right
	On/Off		Smart / List
	Down/Item		Down

