 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Clock/Timer		AV
	Sleep		Sleep
	⊖ Play/Rec		Shift + AV
	Auto Off		Shift + Power
	Quick OSD		Info
	Dimmer		Shift + Mute
	H.Bass		List
	Subwoofer		Shift + List
	Sound		Dual
	A.Only		Shift + Dual
	Surround		Shift + Subt
	M.Re-Master		Subt
	Disc		Pre Ch
	All Disc		Shift + Pre Ch
	1		1
	2		2



Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10		Guide
	PGM		Shift + Sleep
	Group		Red
	Repeat		Text
	Play Mode		Shift + Play
	Stop		Stop
	Quick Replay		Green
	M-Skip		Yellow
	Pause		Pause

 
 
 

 


 

 
 




Originalfernbedienung Ersatzfernbedienung

	TUNER / AUX		Smart
	TAPE <>		Media
	Rec		Rec
	DVD/CD Play		Play
	Top Menu / Direct Navigator		D. Menu
	Menu / Play List		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Functions		Options
	Return		Back
	Angle / Page		Format
	I<< / REW		I<<
	Setup		Shift + Options
	>>I / FF		>>I

Originalfernbedienung Ersatzfernbedienung

	Cancel		Exit
	<< Slow/Search		<<
	Slow/Search >>		>>
	Muting		Mute
	Volume-		Vol -
	Volume+		Vol +

