










Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-------------------------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Cancel |  | Shift + Exit / Cancel / Clear |
|  | Audio |  | Audio / Lang I/II |
|  | Open/Close |  | Eject / Surround |
|  | PIP |  | Picture / Format |
|  | Internet |  | Smart / List |
|  | Audio |  | Sound / Title |

Originalfernbedienung Ersatzfernbedienung






 

 










| | | | |
|---|-------------|---|-----------------------|
|  | << Search |  | << / Tune- |
|  | Play |  | Play / Slow |
|  | Search >> |  | >> / Tune+ |
|  | I<< Skip |  | I<< / Preset- |
|  | Pause |  | Pause / Step / Freeze |
|  | Skip >>I |  | >>I / Preset+ |
|  | Stop |  | Stop / Hold |
|  | Exit |  | Exit / Cancel / Clear |
|  | Status |  | Info / Angle |
|  | Option |  | Setup / OPT / |
|  | Return |  | Back / Return |
|  | Top Menu |  | D.Menu / Top |
|  | Home |  | Menu / Home |
|  | Pop-Up Menu |  | Display / Media |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |



Secondary



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------|--|-----------------------------|
|  | Left |  | Left |
|  | OK |  | OK |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Tv Vol+ |  | Vol+ |
|  | Power TV |  | Shift + Power |
|  | Tv Vol- |  | Vol- |
|  | AV Input TV |  | AV / Input / RDS |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

