

 



 


 
 



 



 



 

 
 



 
 
 
 
 

 







 

 
 

 
 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel		Pre Ch
	Audio		Dual
	Open/Close		Eject
	Status		Info
	Miracast		TV/R
	Internet		Shift + Media

Originalfernbedienung Ersatzfernbedienung

	<< Slow Search		<<
	Play		Play
	Slow Search >>		>>
	I<< Skip		I<<
	Pause		Pause
	Skip >>I		>>I
	Stop		Stop
	Pop-Up Menu		D. Menu
	Exit		Exit
	Option		Options
	Return		Back
	Top Menu		Menu
	Netflix		Media
	Home		Smart
	Up		Up
	Down		Down
	Right/I>		Right





Originalfernbedienung Ersatzfernbedienung

	</Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Power Tv	+	Shift + Power
	AV Input Tv		AV
	Vol+ Tv		Vol +
	Vol- Tv		Vol -

Originalfernbedienung Ersatzfernbedienung

