





























 









Originalfernbedienung Ersatzfernbedienung

A1		1
A2		2
		Power
		I<< / Preset-
		>> I / Preset+
		Play / Slow
		Pause / Step / Freeze
		Stop / Hold
		3
		Sound / Title
		Down
		Up
		<< / Tune-
		>> / Tune+
		Display / Media
		Smart / List
		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

	Volume-		Vol-
	Volume+		Vol+

