 




 
 


 


 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Auto Off	 + 	Shift + Power
	CD Disp		Info
	Clock / Timer	 + 	Shift + AV
	Dimmer		Media
	Timer Play / Rec		Rec
	Disc		Smart
	1 / Disc 1		1
	2 / Disc 2		2
	3 / Disc 3		3
	4 / Disc 4		4
	5 / Disc 5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	≥10		Guide
	DEL		Back
	Program	 + 	Shift + Sleep
	Play Mode	 + 	Shift + Play
	Repeat		Text
	CD Play/Pause		Play
	Tuner Band		TV/R
	Stop / Clear		Stop
	Stop / Clear		Exit
	Tape Play		Pause
	AUX		AV
	Vol -		Vol -
	+ Vol		Vol +
	← Album		Left
	Album →		Right
	I<< / REW / Down / ← Cursor		<<




Originalfernbedienung Ersatzfernbedienung

	I<< / REW / Down / ← Cursor		I<<
	I<< / REW / Down / ← Cursor		Down
	>>I / Up / FF / Cursor →		>>
	>>I / Up / FF / Cursor →		>>I
	>>I / Up / FF / Cursor →		Up
	Intro		Menu
	Marker		Options
	Title Search	+	Shift + TV/R
	Enter		Ok
	S.Sound EQ		Dual
	Preset EQ		Subt
	Muting		Mute

Originalfernbedienung Ersatzfernbedienung

