

 
 

 

 

 
 
 







 

 
 
 
 
 

 

 

 

 












**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject
	Status		AV
	PIP		3D
	Audio		Dual
	Miracast		TV/R
	Internet		Shift + Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung    Ersatzfernbedienung**

	#		Guide
	*/Cancel		Format
	<<		<<
	Play		Play
	>>		>>
	I<<		I<<
	Pause		Pause
	>>I		>>I
	Stop		Stop
	[...]/CC		Subt
	X/Exit		Exit
	Pop-Up Menu/Top Menu		Menu
	Netflix		Media
	Home		Smart
	Option		Options
	Return		Back
	Up		Up





**Originalfernbedienung Ersatzfernbedienung**

	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Power Tv	 + 	Shift + Power
	AV Input Tv	 + 	Shift + AV
	Tv Vol+		Vol +
	Tv Vol-		Vol -

**Originalfernbedienung Ersatzfernbedienung**