


 


 

 

 
 
 

 



 



 
 











 


 






 
 
 

 
 


 





 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall/Last View		Pre Ch
	Radio/Tv		TV/R
	CH/Page+		Ch +
	CH/Page-		Ch -
	Internet		Smart
	Skype		Media


 

 









 

 


 

 




Originalfernbedienung Ersatzfernbedienung

	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	i/Status		Info
	X/Exit		Exit
	Option		Options
	Return		Back
	Direct Navigator		List
	Guide		Guide
	Function Menu		Menu
	Up		Up
	Down		Down
	Right		Right

 
 











Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	Rec Mode		Shift + Rec
	Text		Text
	STTL		Subt
	Prog/Check		Sleep
	Chapter		AV
	Time Slip		Eject
	Audio		Dual
	Drive Select		D. Menu
	Del		Shift + Exit
	Manual Skip -10s		Format

Originalfernbedienung Ersatzfernbedienung

	Manual Skip +60s		3D
	Power Tv		Shift + Power
	Av Input Tv		Shift + AV
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	CH+ Tv		Shift + Ch +
	CH- Tv		Shift + Ch -

