



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Cancel		Exit
	AV		AV
	Input Select		Media
	Direct Tv Rec		TV/R
	ShowView		3D

**Originalfernbedienung Ersatzfernbedienung**

	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Pause		Pause
	Stop		Stop
	Play		Play
	Menu/Play List		Menu
	Top Menu / Direct Navigator		D. Menu
	Functions		Options
	Return		Back
	Up		Up
	Down		Down


 



 






**Originalfernbedienung    Ersatzfernbedienung**

	Right		Right
	Left		Left
	Enter		Ok
	Rec		Rec
	Frame II >		Shift + Right
	< II Frame		Shift + Left
	Manual Skip		Format
	Erase		Text
	Prog/Check		Sleep
	Time Slip		Smart
	Timer		Shift + AV
	Marker		Pre Ch
	Status		List
	Rec Mode		Shift + Rec
	F.Rec		Subt
	A/Display		Red
	A/Display		Info

**Originalfernbedienung    Ersatzfernbedienung**

	B/Position		Green
	C/Audio		Yellow
	C/Audio		Dual
	D/AV Link		Blue



