



 



 



 

 

 

 

 



 



 











**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	HDD	 + 	Shift + Media
	DVD		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Cancel		Exit
	AV		AV
	Input Select		Eject

**Originalfernbedienung    Ersatzfernbedienung**

	Direct Tv Rec		TV/R
	ShowView		3D
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Pause		Pause
	Stop		Stop
	Play		Play
	Menu / Play List		Menu
	Top Menu / Direct Navigator		D. Menu
	Functions		Options
	Return		Back


 

 


 
 
 
 






**Originalfernbedienung Ersatzfernbedienung**

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Rec		Rec
	Frame II>		Shift + Right
	< Frame		Shift + Left
	Manual Skip		Format
	Erase		Text
	Time Slip		Smart
	Prog/Check		Sleep
	Timer		Shift + AV
	Marker		Pre Ch
	Dubbing		Subt
	Status		List
	Rec Mode		Shift + Rec

**Originalfernbedienung Ersatzfernbedienung**

	A/Display		Red
	A/Display		Info
	B/Position		Green
	C/Audio		Yellow
	C/Audio		Dual
	D/AV Link		Blue





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	A		Red
	B		Green
	C		Yellow

Originalfernbedienung Ersatzfernbedienung

	D		Blue
--	---	--	------

