












 



 

 

 


 
 



 



 





 










Originalfernbedienung Ersatzfernbedienung


 



 





	Power		Power
	Input		AV
	i		Info
	[G]		Guide
	*1		Format
	Home		Smart
	Netflix		Media
	*2		3D
	Exit		Exit
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 LANG	Lang	 SOUND DUAL	Dual
 TXT	TXT	 REPEAT TEXT	Text
	<<		<<
	Play	 PLAY MODE	Play
	>>		>>
	Stop		Stop
	Pause		Pause
	Rec	 REC MODE	Rec

