
 



 




Originalfernbedienung Ersatzfernbedienung

|                                                                                     |             |                                                                                     |               |
|-------------------------------------------------------------------------------------|-------------|-------------------------------------------------------------------------------------|---------------|
|    | Power       |    | Power         |
|    | Sleep       |    | Sleep         |
|    | AUX         |    | AV            |
|    | Tuner/Band  |    | TV/R          |
|    | Preset Down |    | Ch -          |
|    | Preset Up   |    | Ch +          |
|    | Program     |    | Shift + Sleep |
|    | Cancel      |    | Exit          |
|    | Repeat      |    | Text          |
|    | Disc        |    | Guide         |
|   | Disc 1      |   | 1             |
|  | Disc 2      |  | 2             |
|  | Disc 3      |  | 3             |
|  | Disc 4      |  | 4             |
|  | Disc 5      |  | 5             |
|  | I<<         |  | I<<           |
|  | >>I         |  | >>I           |

Originalfernbedienung Ersatzfernbedienung

|                                                                                       |                  |                                                                                       |        |
|---------------------------------------------------------------------------------------|------------------|---------------------------------------------------------------------------------------|--------|
|    | Play             |    | Play   |
|    | Pause            |    | Pause  |
|    | Stop             |    | Stop   |
|    | Deck 1/2 Tape    |    | Smart  |
|    | << Tape          |    | Down   |
|    | >> Tape          |    | Up     |
|    | < Tape           |    | Left   |
|    | Stop Tape        |    | Ok     |
|    | > Tape           |    | Right  |
|    | V. Bass          |    | Dual   |
|   | EQ Space On/Flat |   | Subt   |
|  | EQ Space Mode    |  | Format |
|  | Volume+          |  | Vol +  |
|  | Volume-          |  | Vol -  |
|  | Muting           |  | Mute   |

