
 
 
 







Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Standby	 + 	Shift + Power
	Focus		CH+ / Page+
	Zoom		Zoom / Size
	Shift		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Shutter		Smart / List
	Vol-		Vol-
	Left		Left
	Enter		OK
	Right		Right
	Vol+		Vol+
	On-Screen		Display / Media
	Down		Down
	Auto Setup		Setup / OPT /
	RGB 1/2		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Digital Link		Green / APP / Repeat
	DVI-D		Yellow / YouTube / Repeat
	Video	 + 	Shift + Red / Netflix /
	Video	 + 	Shift + 4
	Display Port		Blue / Prime Video / Random
	HDMI	 + 	Shift + Green / APP /
	HDMI	 + 	Shift + 0
	HDMI		AV / Input / RDS
	1/Function		1
	2/Keystone		2
	3/Default		3
	4/Freeze		Pause / Step / Freeze
	4/Freeze		4
	5/D.Zoom		5
	5/D.Zoom	 + 	Shift + Zoom /
	6/Mute		6
	6/Mute		Mute / Dimmer





Originalfernbedienung Ersatzfernbedienung

	7/P-Timer		7
	7/P-Timer		Sleep / Timer
	8/P IN P		8
	9/Aspect		9
	9/Aspect		Picture / Format
	ID ALL		Guide / EPG / -/--
	0/Status		0
	0/Status		Info / Angle
	ID SET		Fav / Marker / PC
	ECO		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

