



 

 

 
 
 


 

 


 
 
 
 
 




 


 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	C		Pre Ch
	Multi Window		Smart
	Aspect		Format
	SRS		Dual
	SD		Media
	Mute		Mute
	TV/AV		AV
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Red		Red
	Green		Green

 




 

 

 

 
 
 





 




Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	Text		Text
	F.P.		3D
	Index		TV/R
	Hold		Shift + Stop
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / VCR		0
	N		Options







Originalfernbedienung Ersatzfernbedienung

	i		Info
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Programme+		Shift + Ch +
	Programme-		Shift + Ch -
	<< / <<		<<
	<< / <<		<<
	>> / >>		>>
	>> / >>		>>
	Stop		Stop
	Pause / Step		Pause
	Play		Play
	Power (DVD)		Shift + Power
	SD Rec		Shift + Media
	Rec		Rec

Originalfernbedienung Ersatzfernbedienung

	Direct TV Rec		Shift + Rec

