
 




**Originalfernbedienung Ersatzfernbedienung**

	Power/On		Power
	Standby		Shift + Power
	Focus		Text
	Zoom		Eject
	Shift		D. Menu
	Menu		Menu
	AV Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Vol+		Vol +
	Left		Left
	Vol-		Vol -
	Enter		Ok
	On Screen		Info
	Auto Setup		Smart
	RGB 1/2		Shift + 1

**Originalfernbedienung Ersatzfernbedienung**

	Digital Link		Shift + 2
	DVI-D		Shift + 3
	Video		Shift + 4
	Display Port		Shift + 5
	HDMI		Shift + 6
	1/Function		1
	2/Keystone		2
	3/Default		3
	4/Freeze		4
	5/D.Zoom		5
	6/Mute		6
	7/P-Timer		7
	8/P IN P		8
	9/Aspect		Format
	9/Aspect		9
	0/Status		0
	ID All		Guide





Originalfernbedienung Ersatzfernbedienung

ID SET	ID Set	FAV PRE-CH	Pre Ch
ECO	Eco	ECO 3D	3D

Originalfernbedienung Ersatzfernbedienung